

MAINTENANCE MURSEC ECO DEVICE

MURSEC ECO devices do not require maintenance, just make sure that they have power and that the **GREEN** light stays on.



- **Keep the MURSEC ECO device always connected.** The device has an internal clock that track its working time.
- MURSEC ECO devices always keep the **GREEN** LED on.
- **Questions & Answers:**

SYMPTOM	POSSIBLE CAUSE	ACTION
GREEN LED is permanently off	1.No electric current 2.Problem with the transformer 3.Problem with the device	1. Make sure there is current to power the device 2. Change the transformer for another with the same characteristics 3. Notify the Technical Service
LED is RED	1. Problem with device operation	1. Notify the Technical Service
LED is BLUE	1. There is an electronic device connected to the WiFi of the MURSEC ECO	1. Do nothing. When disconnected it will turn GREEN
I connect by WiFi with the device and after a while it disconnects	1. After 7 minutes, the MURSEC ECO device automatically disconnects to prevent it from being permanently connected.	1. If you want to reconnect, follow the instructions to activate the MURSEC ECO WiFi again and reconnect.

- Neither the MURSEC ECO device nor any element of the system must be modified or unsealed. If the internal seal is broken, the guarantee will be void.
- Prevent liquid from getting inside the device.